



DE	Gebrauchsanweisung	Handmixer	4
GB	Instructions for use	Hand blender	8
FR	Mode d'emploi	Mixeur à main	12
NL	Gebruiksaanwijzing	Hand Mixer	16
ES	Instrucciones de uso	Batidora	20
IT	Manuale d'uso	Sbattitore	24
DK	Brugsanvisning	Håndmikser	28
SE	Bruksanvisning	Elvisp	31
FI	Käyttöohje	Käsikäyttöinen vatkain	34
PL	Instrukcja obsługi	Mikser ręczny	37
GR	Οδηγίες χρήσεως	Μίξερ	41
RU	Руководство по эксплуатации	Ручной миксер	45



Hand blender

Dear Customer,

Before using the appliance, please read the following instructions carefully and keep this manual for future reference. The appliance must only be used by persons familiar with these instructions.

Connection to the mains supply

Make sure that the supply voltage corresponds to the voltage marked on the rating label of the appliance. This product complies with all relevant CE-labelling directives.

Familiarisation

1. Eject button
2. Multistage switch
3. Turbo button
4. Power cord with plug
5. Rating label (on underside)
6. 2 dough hooks
7. 2 beater attachments

Important safety instructions

- In order to avoid hazards, repairs to this electrical appliance or its power cord must be carried out by our customer service. If repairs are needed, please send the appliance to our customer service department (see appendix).
- To avoid the risk of electric shock, do not clean the appliance with water and do not immerse it in water.

- The attachments may be cleaned in hot, soapy water. For detailed information on cleaning the appliance, please refer to the section *Cleaning and care*.
- Always switch the appliance off and remove the plug from the wall socket
 - before fitting or removing any attachments,
 - in case of any malfunction,
 - during cleaning,
 - when there is no supervision,
 - after each cycle of use.
- **Caution:** Any misuse can cause severe personal injury.
- The appliance may only be used by persons with reduced physical, sensory or mental capabilities, or lacking experience and knowledge, if they have been given supervision or instruction concerning the use of the appliance and fully understand all dangers and safety precautions involved.
- Children must not be permitted to operate the appliance. The appliance and its power cord must be kept well away from children.

- Children must not be permitted to play with the appliance.
- **Caution:** Keep any packaging materials well away from children – such materials are a potential source of danger, e.g. of suffocation.
- Every time the appliance is used, the main body including the power cord as well as any attachment fitted should be checked thoroughly for any defects. Should the appliance, for instance, have been dropped onto a hard surface, or if excessive force has been used to pull the power cord, it must no longer be used: even invisible damage may have adverse effects on the operational safety of the appliance.
- **Caution:** After switching off, always wait until the motor has come to a complete standstill. Do not touch any moving parts.
- Do not allow the housing or the power cord to touch hot surfaces such as hotplates, or come into contact with any open heat sources.
- When removing the plug from the wall socket, never pull on the power cord; always grip the plug itself.
- Do not touch any moving parts during operation, and do not insert any implements (e.g. dough scrapers or cooking spoons) into the bowl unless the motor has come to a complete standstill.
- No responsibility is accepted if damage results from improper use, or if these instructions are not complied with.
- This appliance is intended for domestic or similar applications, such as
 - in shops, offices and other similar working environments,
 - in agricultural working environments,
 - by customers in hotels, motels etc. and similar establishments,
 - in bed-and breakfast type environments.

Before using for the first time

Before the appliance is used for the first time, all attachments and accessory parts must be cleaned as described in the section *Cleaning and care*.

Short-time operation

When using the speed levels **1 - 5**, the unit should not be operated continuously for more than 4 minutes. Switch off the appliance afterwards and allow the motor to cool down.

Switch settings

- The unit is equipped with a multistage switch.
- The following settings are available:
 - 0** The unit is switched off
 - 1** very low speed
 - 2** low speed
 - 3** medium speed
 - 4** medium high speed
 - 5** high speed
- When mixing light and liquid mixtures or when stirring in any ingredients, settings **1** and **2** should be used.
- For stirring and kneading, it is best to use settings **3**, **4** or **5**.

Turbo function

Maximum speed may be obtained by pressing down the turbo button, regardless of the speed level selected.

Selecting the attachments

Beaters

Suitable for light and liquid mixtures such as crèmes, mixing dough, mashed potatoes, egg white or cream etc.

Dough hooks

For heavy, kneading-type dough, the dough hooks must be used. The hook with the integrated plate must be inserted into the larger opening ().

Operation

- Insert the selected attachments into the openings on the underside of the mixer and push them gently upwards until they lock into place.
- Depending on the quantity of ingredients, use a sufficiently deep bowl.
- Any bowl, round container or glass is suitable, provided it is scratch-proof and the attachments can rotate freely inside.
- After fitting the attachments, take the mixer into your hand and position the attachments inside the container filled with the ingredients.
- Use your thumb to switch on the unit.
- When you have finished mixing or if you wish to interrupt the operation, switch off first before lifting the attachments out of the mixture.

Ejecting the attachments

The beaters or dough hooks are automatically detached when pressing the eject button.

Cleaning and care

- Remove the plug from the wall socket before cleaning the appliance.

- To avoid the risk of electric shock, do not clean the appliance with water and do not immerse it in water.
- The housing may be wiped with a slightly damp, lint-free cloth.
- The beaters and dough hooks may be cleaned in hot, soapy water. These parts are not dish-washer safe.

Heavy dough (kneading-type)

For a dough of max. 1590 g, use the dough hooks and thoroughly knead 925 g of flour with 665 g of water.

Disposal



Devices marked with this symbol must be disposed of separately from your household waste, as they contain valuable materials which can be recycled. Proper disposal protects the environment and human health. Your local authority or retailer can provide information on the matter.

Guarantee

This product is guaranteed against defects in materials and workmanship for a period of two years from the date of purchase. Under this guarantee the manufacturer undertakes to repair or replace any parts found to be defective, providing the product is returned to one of our authorised service centres. This guarantee is only valid if the appliance has been used in accordance with the instructions, and provided that it has not been modified, repaired or interfered with by any unauthorised person, or damaged through misuse.

This guarantee naturally does not cover wear and tear, nor breakables such as glass and ceramic items, bulbs etc. This

guarantee does not affect your statutory rights, nor any legal rights you may have as a consumer under applicable national legislation governing the purchase of goods. If the product fails to operate and needs to be returned, pack it carefully, enclosing your name and address and the reason for return. If within the guarantee period, please also provide the guarantee card and proof of purchase.