


SEVERIN

Gebrauchsanweisung	Fusselrasierer	(D)
Instructions for use	Lint shaver	(GB)
Mode d'emploi	Rasoir anti-peluches	(F)
Gebruiksaanwijzing	Pluis scheerder	(NL)
Instrucciones de uso	Maquinilla elimina-pelusa	(E)
Manuale d'uso	Leva pelucchi	(I)
Brugsanvisning	Fnugfjerner	(DK)
Bruksanvisning	Noppborttagare	(S)
Käyttöohje	Nukanpoistaja	(FIN)
Instrukcja obsługi	Maszynka do usuwania kłaczków	(PL)
Οδηγίες χρήσεως	Ξυριστική μηχανή για χνούδι	(GR)
Руководство по эксплуатации	Машинка для удаления катышков	(RUS)

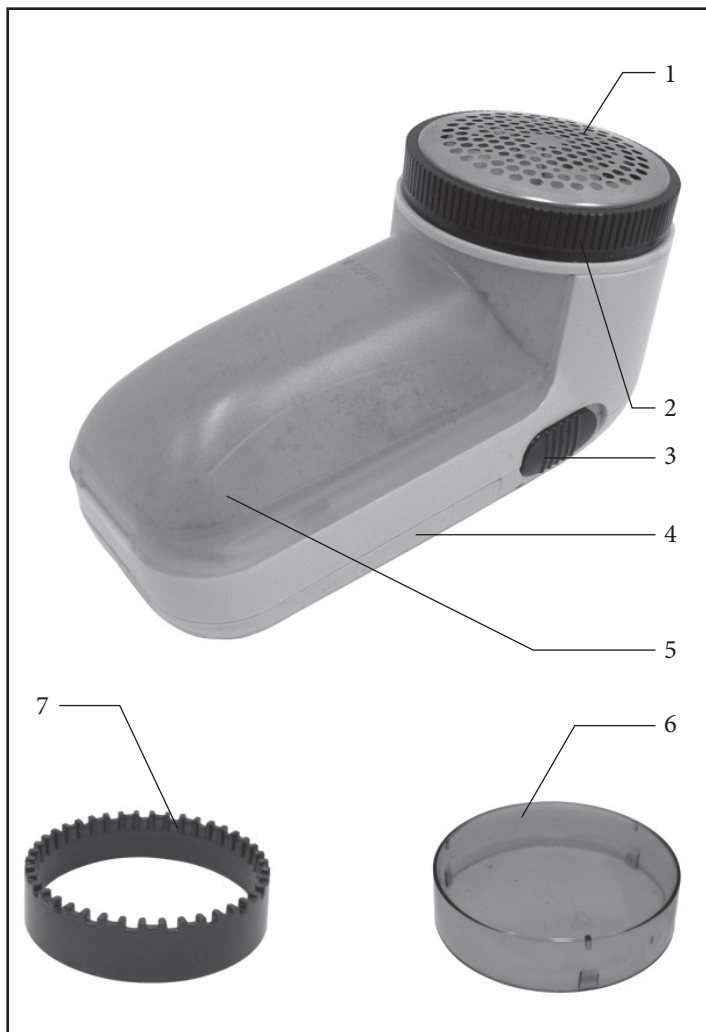

Dear Customer,

Before using the appliance, the user should read the following instructions carefully.

Familiarisation

1. Perforated shaving area
2. Shaving head
3. On-/Off switch
4. Battery compartment cover
5. Lint chamber
6. Protective cover
7. Spacer ring

Important safety instructions

- Before the appliance is used, the main body as well as any fitted attachments should be checked thoroughly for any defects. If the appliance, for instance, has been dropped onto a hard surface, it must no longer be used: even invisible damage may have adverse effects on its operational safety.
- Do not attempt to charge or by any other means reactivate batteries; never take batteries apart, burn or short-circuit them.
- **Caution:** The shaving blades are extremely sharp. To prevent injury, take special care when removing the head. After removing the lint chamber, **do not** put your fingers into the aperture now opened up. To ensure that the motor does not inadvertently start to run, always remove the batteries before cleaning the appliance. This will prevent the risk of injury from cuts or contusions, and also protect the appliance from damage.
- Protect the appliance from humidity at all times. It must only be used on dry fabrics.
- Structured fabrics or very soft material, such as mohair, may be damaged by using the shaver. We therefore suggest that you test the result first on a non-visible part of

the fabric, e.g. inside a seam.

- **Caution:** Do not use the appliance as a hair shaver on the body or face; there is a risk of injury.
- Always remove the batteries from the appliance once they are exhausted, and also during extended periods of non-use. This will prevent damage to the appliance from leakage.
- Both batteries should be replaced at the same time. Do not use batteries of different types or brands, or those of different capacities.
- This appliance is not intended for use by any person (including children) with reduced physical, sensory or mental capabilities, or lacking experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Keep children well away from packaging materials, as there is a potential source of danger e.g. from suffocation.
- No responsibility will be accepted if damage results from improper use, or if these instructions are not complied with.
- This appliance is intended for domestic use only and not for commercial applications.
- In order to comply with safety regulations and to avoid hazards, repairs of electrical appliances must be carried out by qualified personnel. If repairs are needed, please send the appliance to one of our customer service departments. The address can be found in the appendix to this manual.

Applications

The lint shaver is designed for the removal of lint, little balls of fuzz, hair or dust from the surface of textile fabric or furniture upholstery.

Safety switch

The appliance is equipped with a safety switch. Any attempt to remove the shaving

head will cause the appliance to switch off automatically in order to prevent personal injury or damage to the appliance.

Batteries

This appliance requires two batteries of type LR14 / 1.5 V (size C); the use of alkaline batteries is preferable, as they are longer-lasting than the standard carbon-zinc batteries. The batteries are inserted as follows:

- Slide the battery compartment cover in the direction indicated by the arrow and take it off.
- Insert the batteries according to the schematic diagram inside the compartment, ensuring correct polarity (+/-).
- Replace the compartment cover and slide it back until it is heard locking into place.
- When the lint chamber is empty, a significant decrease in operating speed is a clear indication that the batteries are exhausted, and that they should be replaced.
- Never dispose of old batteries in your domestic garbage. Old batteries must be disposed of through local 'special garbage collection points'.



Operation

- Place the item to be treated on a level surface.
- Remove the protective cover from the head. For coarser wool surfaces, the use of the spacer ring is recommended.
- Use the On-/Off switch to turn the appliance on. The shaving blades inside the shaving head start rotating. When they come into contact with the surface of the area to be treated, a distinct noise can be heard. This is normal.

- Guide the shaving head gently and without exerting any pressure over the fabric to be treated. Lint and fuzz balls are removed and collected in the lint chamber.
- The chamber should always be emptied in good time. If the motor seems to lose power, or if it stops working completely, the lint chamber may be over-full.
- Turn the appliance off after use.

General care and cleaning

- Before cleaning the appliance, turn the motor off and remove the batteries from the battery compartment.
- To avoid the risk of electric shock, do not clean the appliance with water and do not immerse it in water.
- Do not use abrasives or harsh cleaning solutions.
- To empty the lint chamber, slide it out of the appliance in the direction indicated by the arrow. Once emptied, slide the chamber back into the appliance until it is heard locking into place.
- The exterior housing may be wiped with a slightly damp soft cloth.
- The shaving head can be cleaned as follows:
- Remove the spacer ring and the protective cover from the appliance.
- Take off the shaving head by unscrewing it in an anti-clockwise direction.
- **Caution:** Exercise extreme caution when removing the lint residues. The blades are very sharp, and there is a risk of injury.
- Replace the head back on the appliance and turn it clockwise to secure. Replace the protective cover and – if applicable – the spacer ring.

Disposal



Do not dispose of old or defective appliances in domestic garbage; this should only be done through public collection points.

Guarantee

This product is guaranteed against defects

in materials and workmanship for a period of two years from the date of purchase. Under this guarantee the manufacturer undertakes to repair or replace any parts found to be defective, providing the product is returned to one of our authorised service centres. This guarantee is only valid if the appliance has been used in accordance with the instructions, and provided that it has not been modified, repaired or interfered with by any unauthorised person, or damaged through misuse.

This guarantee naturally does not cover wear and tear, nor breakables such as glass and ceramic items, bulbs etc. This guarantee does not affect your statutory rights, nor any legal rights you may have as a consumer under applicable national legislation governing the purchase of goods. If the product fails to operate and needs to be returned, pack it carefully, enclosing your name and address and the reason for return. If within the guarantee period, please also provide the guarantee card and proof of purchase.