

PHILIPS

Shaver

3000X Series



フィリップス 電動シェーバー

品番 X3001/00, X3002/00, X3003/00, X3051/00, X3052/00, X3053/00

取扱説明書

フィリップス電動シェーバー

●商品のご確認

商品をご確認ください。

本体

※改良の為、仕様を予告なく変更することがあります。

保護キャップ

充電ケーブル

目次
① 必ずお守りください
② 各部の名称
③ LED表示について
④ 充電のしかた
⑤ シェービングのしかた(ドライ)
⑥ シェービングのしかた(ウェット)
⑦ ポップアップトリマーの使いかた
⑧ お手入れ方法
⑨ 分解掃除のしかた
⑩ 刃の交換
⑪ 保護キャップの取り付けかた
⑫ 保管のしかた
⑬ シェーバーを廃棄するとき
⑭ 故障かな?と思ったら
⑮ 保証とアフターサービス
⑯ 仕様
⑰ 無料修理規定
Guidance in English

© 2024 Koninklijke Philips N.V.
記載されている製品名などの固有名称は、Koninklijke Philips N.V. またはその他の会社の商標または登録商標です。
3000.110.5647.2 (03/24)

＜フィリップス 電動シェーバー 保証書＞

CERTIFICATE OF PURCHASE

この保証書は、「無料修理規定」記載内容で無料修理を行うことを約束するものです。お買い上げの日から下記期間中に故障が発生した場合は、フィリップスサポートセンターにお問い合わせください。お客様にご記入いただいた個人情報(保証書の控え)は、株式会社フィリップス・ジャパンのホームページ <http://www.philips.co.jp/> に掲載されているプライバシーに関する通知に基づき適切に管理いたします。

品名	電動シェーバー
品番	X3001/00, X3002/00, X3003/00, X3051/00, X3052/00, X3053/00
保証期間	お買い上げ日より2年
対象部分	本体、充電ケーブル(シェービングユニット、保護キャップを除く)
お買い上げ日	年 月 日
ご住所 〒	
ご氏名	
電話番号	
販売店名・住所・電話番号	

★ 保証書は再発行しませんので、大切に保管してください。
★ ご販売店様へこの保証書はお客様へのアフターサービスの実施と責任を明確にするものです。贈答品、記念品の場合も含めて必ず記入捺印してお客様にお渡しください。

★ 製品の使用方法や修理に関するお問い合わせ

フィリップスサポートセンター
0120(944)859
受付時間:9:00～18:00(年末年始除く)

Webからのお問い合わせ

My Philips 登録のご案内

フィリップスでは、製品をより快適にご使用いただくために製品登録をおすすめしております。My Philipsでは製品の保証書や、購入証明書の写真も保管できます。方が購入証明書を紛失された場合にも安心です。

URL <http://www.philips.co.jp/myphilips/about>

この印刷物は再生紙を使用しております。

フィリップス シェーバーをお買い上げいただき、まことにありがとうございます。長い間ご利用いただくために、ご使用前にこの取扱説明書をよくお読みのうえ、正しくお使いください。
また、お読みになされた後は、お使いになる方がいつでも見られるところに必ず保管してください。

●商品のご確認

商品をご確認ください。

本体

※改良の為、仕様を予告なく変更することがあります。

保護キャップ

充電ケーブル

お買い上げのお客様へ 初めてご使用になる際は、ご使用前に充電してください。

警告

●濡れた手で充電ケーブルを抜き差ししないでください。感電やけがをすることがあります。

●充電ケーブルを無理に曲げたり、引っ張ったり、ねじったり、たばねたり、重いものを載せたり、挟み込んだり、加工したりしないでください。電源コードが破損し、火災・感電の原因となります。

●刃が破損または故障した場合は、本製品を使用しないでください。けがの原因になります。交換の際には必ずフィリップス社製の同型部品と取り替えてください。

●乳幼児の手の届くところに本製品を置かないでください。またお子様が本製品で遊ぶことがないように監視してください。

●補助を必要とする人(子ども含む)に使用させないでください。また、お体の不自由な人だけでは使用しないでください。

注意

●充電する場合は、定格出力電圧DC5V、定格出力電流1A以上で、タイププレートにPSEマークの表示がある安全技術基準に適合したUSB充電アダプタで充電してください。

●USB充電アダプタとの接続には変換コネクタや変換ケーブルは使用しないでください。本体の破損や火災の原因となります。

●充電ケーブルを抜くときは、電源コード部を保持するに必ず先端のコネクタ部を持って引き抜いてください。感電やショートして発火することがあります。

●衛生上の理由から他の人と共有しないでください。

●充電時以外は、本体から充電ケーブルを抜いてください。けがややけど、絶縁劣化による感電・漏電・火災の原因となります。

●電源コネクタ受部にピンやごみを付着させないでください。感電・ショート・発火の原因になります。

●刃は強く押さないでください。破損して皮膚を傷つけることがあります。

●本製品や部品を食器洗浄機で洗わないでください。故障や破損の原因になります。

●本製品を電子レンジやIH調理器具の近くに保管しないでください。故障や破損の原因になります。

●ご使用前に刃に異常がないことを確認してください。

使用上のご注意

1. フィリップスシェーバーを初めてお使いの方は、剃り方に慣れるまで2～3週間かかることがあります。

2. 本体のお手入れは、水またはぬるま湯で行ってください。60℃以上の熱湯では洗わないでください。研磨パッドや研磨剤を含んだ洗剤またはエラスターは使用しないでください。

3. 外刃は、強くは上げてありますので、刃部を強く押さたり、硬いものに当てないでください。うがいには使ってください。

4. シェービングユニットの掃除や着脱は、必ず電源をOFFにしてから行ってください。

5. 切れ味が落ちてきたり、刃が破損した場合は、使用せず必ず新しい替刃に交換してください。

6. 直射日光の当たる場所には保管しないでください。夏場、車の中に放置しないでください。

7. ご使用の都度「⑧お手入れ方法」に従ってお手入れしてください。

8. シェーバー本体は防水加工をしておりますが、水や液体の中に浸けないでください。

② 各部の名称

本体 / ポップアップトリマー / 充電ケーブル / 保護キャップ

ポップアップトリマー

保護キャップ

シェービングユニット

シェービングユニット リリースボタン

電源ボタン

充電表示ランプ

電源コネクタ受部

充電ケーブル

USBコネクタ部 (USB Type-A)

電源コード部

トリマースライド

●本製品は充電式電池を内蔵しています。本製品の充電、使用、保管は5℃から35℃の環境で行ってください。火中投入、加熱、高温での充電、使用・放置をしないでください。発熱・発火・破損の原因になります。また電池の寿命にも影響を及ぼします。

③ LED表示について

初めてお使いになるときや、長い間ご使用にならなかったときは、LED表示が出るまでに時間がかかる場合があります。

シェービングユニット

シェービングヘッドホルダー

シェービングヘッド分解図

保持板

内刃

外刃

シェービングヘッドホルダー受部

(替刃品番: SH30)

※USB充電アダプタは付属していません。充電の際は、USB充電アダプタ(定格出力電圧DC5V、定格出力電流1A以上でタイププレートにPSEマークの表示がある安全技術基準に適合したUSB充電アダプタ)をご準備ください。

LED表示について

●充電完了表示

充電が完了すると、充電表示ランプが白く点灯します。
※満充電後、約30分経過後まで充電表示ランプが消えます。

●充電催促表示

動作中に充電残量が少なくなると、充電表示ランプがオレンジ色に点滅します。

●充電表示

充電中は充電表示ランプが白色に点滅します。

充電のしかた

※充電しながらシェービングはできません。

●定格出力電圧DC5V、定格出力電流1A以上で、タイププレートにPSEマークの表示がある安全技術基準に適合したUSB充電アダプタで充電してください。

●USB充電アダプタとの接続には変換コネクタや変換ケーブルは使用しないでください。

●水場や浴室で充電をしないでください。

●接続の前に各コネクタ部が完全に乾いていることを確認してください。

●濡れた手で充電ケーブルを抜き差ししないでください。

初めてお使いになるときや、長い間お使いにならなかったとき、または充電残量が少なくなつときは、ご使用前に充電してください。充電時間は約1時間です。充電開始後数分間、充電表示ランプが点滅しないことがあります。そのまま充電を続けると充電表示ランプが点滅します。

※ニッケル水素電池の特性上、電池容量を使い切らずに充電を繰り返すと使用可能時間が減少することがあります。これを避ける為、最後まで充電を使い切ってから、充電することをおすすめします。

1. シェーバー本体の電源がOFFになっていることを確認してください。

2. 充電ケーブルの電源コネクタ部をシェーバー本体の電源コネクタ受部に差し込みます。

3. 充電ケーブルのUSBコネクタ部をUSB充電アダプタに差し込みます。

4. ご家庭のコンセントにUSB充電アダプタの電源プラグ部を差し込みます。

クイックチャージ

充電残量中の状態で充電アダプタで充電すると、約5分間でシェービング1回分が急速充電されます。
※クイックチャージ中は充電表示ランプが高速点滅します。
※クイックチャージが完了すると通常の充電が行われます。その際、充電表示ランプがゆっくり点滅します。

ポイント

●充電中、テレビ等に雑音が入る場合、別のコンセントで充電してください。

●充電・ご使用中は本体が多少熱くなりますが、異常ではありません。

●電池の寿命は使用・保管などの状態により異なります。

●ニッケル水素電池の特性上、電池容量を使い切らずに充電を繰り返すと使用可能時間が減少することがあります。これを避ける為、最後まで充電を使い切ってから、充電することをおすすめします。

注意

●充電中、テレビ等に雑音が入る場合、別のコンセントで充電してください。

●充電・ご使用中は本体が多少熱くなりますが、異常ではありません。

●電池の寿命は使用・保管などの状態により異なります。

●ニッケル水素電池の特性上、電池容量を使い切らずに充電を繰り返すと使用可能時間が減少することがあります。これを避ける為、最後まで充電を使い切ってから、充電することをおすすめします。

⑤ シェービングのしかた(ドライ)

肌が乾いた状態でシェービングのしかたです。ご使用の際は本体から充電ケーブルを抜いてご使用ください。接続されていると作動しません。

注意 ●シェーバー本体は防水加工をしておりますが、水や液体の中にも浸けないでください(故障の原因となります)。ご使用前に刃に異常がないことを確認してください。

●モーターの始動時、微細な振動がシェーバー本体に伝わりますが、問題はありません。
●ほこりなどで肌が汚れている場合、ふきとってからご使用ください。
●使用前の外刃に破れや変形がないか確認してください(外刃に破れや変形があると肌を傷つける原因になります)。
●ヒゲ剃り以外の目的(剃鬚など)には、使用しないでください。

1. 電源ボタンを押し、電源をONにします。

2. 刃を肌に軽く押しあて、円を描くように動かしながら剃ります。
※あまり強く押し当て過ぎると、肌を傷める可能性があります。

3. シェービング後は電源ボタンを押し、電源をOFFにします。

4. シェーバーをきれいに洗います。「⑧お手入れ方法」をご参照ください。

上手に剃るには

肌に強く押しつけるのではなく、軽く押しあてて自分から見て時計回りに回転させながら剃るのがコツです。

ほお

肌を伸ばし、ヒゲを立たせるように円を描くように小さく回転させながら剃ります。

あごの裏側

刃に軽くあて、図のようにあごを上げて円を描くように小さく回転させながら剃ります。

ほおの奥から首筋

片方手で肌を後ろに引っ張りながら剃ります。

鼻の下

鼻の下を伸ばし、円を描くように小さく回転させながら剃ります。

フィリップスのシェーバーを初めてお使いの方は、剃りかたに慣れるまで2～3週間かかることがあります。初めてのシェービングで思い通りの結果が得られないことや、少し肌にヒリヒリ感が残る場合がありますが、これは普通のことです。フィリップスのシェーバーに慣らすシェービング方法を要する時には、肌もヒゲも新しいシェービング方法に慣れる時間が必要です。新しいシェーバーに肌を慣らす為、まずは3週間このシェーバーを使い続けてみてください(最低でも1週間に3回以上)。この3週間後、あまりシェービング方法を要せず、同じシェーバーで肌を慣らすことが大切です。

⑥ シェービングのしかた(ウェット)

シェービングフォームやシェービングジェルを使ったシェービングのしかたです。剃った部分を実感しながら、さらさらなシェービングができます。

注意 ●シェーバー本体は防水加工をしておりますが、水場や浴室でも使用できますが、水や液体の中にも浸けないでください(故障の原因となります)。ご使用前に刃に異常がないことを確認してください。

●モーターの始動時、微細な振動がシェーバー本体に伝わりますが、問題はありません。
●ご使用前の外刃に破れや変形がないか確認してください(外刃に破れや変形があると肌を傷つける原因になります)。
●ヒゲ剃り以外の目的(剃鬚など)には、使用しないでください。
●石けんもお使いいただけますが、肌の上での滑りをよくするため、シェービングフォームやジェルの使用をお勧めします。

1. 顔を濡らし、市販のシェービングフォームまたはシェービングジェルを付けます。

2. シェービングヘッドを水で濡らし、肌の上でなめらかに動くようにします。

3. 電源ボタンを押し、電源をONにします。

4. 刃を肌に軽く押しあて、円を描くように動かしながら剃ります。
シェービングフォームやシェービングジェルにより、髪を見た時に剃った部分を確認しやすくなります。
※途中、よりなめらかにシェービングするために、シェービングヘッドを水で濡らすと効果的です。

5. シェービング後は電源ボタンを押し、電源をOFFにします。

6. シェーバーをきれいに洗います。「⑧お手入れ方法」をご参照ください。

重要

シェービング後は、シェービングフォームやシェービングジェルがしっかりと洗い流されているかを確認してください。お手入れが不十分の場合、臭いが出るばかりでなく、故障の原因にもなります。

⑦ ポップアップトリマーの使いかた

ポップアップトリマーはヘアライン、もみあげ、ヒゲなどを整えるのに便利です。

1. トリマースライドを下方向に押し、ポップアップトリマーを開きます。電源をONにするなど、ポップアップトリマーの先端の刃が往復してカットします。

2. 電源ボタンを押し、電源をONにします。

3. 鏡を見ながらポップアップトリマーをカットしたいところに直角にあたるようにしてください。一度に切らずに、少しずつカットしてください。

4. 詰まりや損傷を防ぎ切れ味を保つため、使用後は電源をOFFににて、必ずポップアップトリマーをクリーニングしてください。「⑧お手入れ方法」をご参照ください。

※ポップアップトリマーはオカシやティッシュペーパーなどでふかないでください。刃を傷める恐れがあります。

注意 ●強く押し過ぎて過ると肌を傷めますのでご注意ください。

⑧ お手入れ方法

注意 ●本製品や部品を食器洗浄機で洗わないでください。
●お手入れの際は、電源をOFFにしてから洗ってください。

シェービングユニットのお手入れ方法

シェービングユニットはご使用の都度、水洗いによるお手入れをしてください。

注意 ●シェービングユニットは水洗いできますが本体は水中に浸さないでください。
●シェービングユニットを乾燥させる時に、タオルやティッシュペーパーを使用しないでください。刃を傷める場合があります。
●研磨パッドや研磨剤を含んだ洗剤またはエラスターは使用しないでください。

※ ぬるま湯(40℃前後)でのお手入れをおすすめします。臭いのもととなる皮脂や汗などが取れやすくなります。ただし、60℃以上の熱湯では洗わないでください。故障の原因となります。
※ お手入れ中にシェーバーの底から水が湧いてくる場合がありますが、異常ではありません。

1. シェービングユニットリリースボタン(図①)を押し、シェービングユニットを開けます。

2. シェービングユニットの内部をぬるま湯または水で約30秒洗います。

3. シェービングユニットの外側をぬるま湯または水で約30秒洗います。

4. シェービングユニットの余分な水を切り、よく乾かします。
※シェービングユニットを乾燥させる時に、タオルやティッシュペーパーを使用しないでください。刃を傷める場合があります。

5. 乾いたことを確認したら、シェービングユニットを閉じてください。

ポップアップトリマーのお手入れ方法

※3ヵ月や損傷を防ぎ切れ味を保つため、使用後は必ずポップアップトリマーをクリーニングしてください。

1. トリマースライドを下方向に押し、ポップアップトリマーを開きます。

2. シェーバーの電源をONにして、ぬるま湯または水ですすぎ洗いをします。

3. シェーバーの電源をOFFにし、ポップアップトリマーを充分に乾燥させてください。
※ポップアップトリマーはティッシュペーパーやタオルなどでふかないでください。刃を傷める原因になります。

4. ポップアップトリマーを閉じます。

⑨ 分解掃除のしかた

●分解掃除は約1カ月に1回が目安です。
●分解掃除する場合は、内刃と外刃の組み合わせを変えないようにご注意ください。組み合わせが変わると、刃の状態が劣化しになるまで数週間かかる場合があります。

刃の取り外し方

1. シェービングユニットリリースボタン(図①)を押し、シェービングユニットを開けます。シェービングユニットを上方向に動かす(図②)と本体からはずすことができます。

2. 保持板は中央のつまみを図③矢印の方向(反時計回り)に回し、図④の方向に持ち上げるとはずれます。回転刃を1組ずつユニットフレームより取り外します(図⑤)。

3. 取り外した回転刃を外刃・外刃1組ずつお湯(40℃前後)に浸して皮脂やヒゲくずを落とします。

4. 内刃と外刃を充分乾燥させます。

刃の取り付け方

1. 内刃と外刃を正しい組み合わせにセットし、外刃をユニットフレームに戻します。このとき外刃とシェービングヘッドホルダーの凸凹が合うようにしてください。

2. 保持板をユニットフレームに戻し(図⑥)、中央のつまみを時計回りに回して(図⑦)セットしてください。

3. シェービングユニットの全具を本体のくぼみに差し込み(図⑧)、本体にセットします(図⑨)。シェービングユニットがスムーズに閉じないときは、シェービングヘッドホルダーが正しくセッティングされているかを確認してください。

⑩ 刃の交換

専用の替刃品番はSH30です。

※シェービング性能を維持するために、刃は2年ごとに交換することをおすすめします。
※交換する際は、必ずフィリップス社製の替刃(SH30)にお取替えください。

替刃 SH30 と交換する場合

●外刃の向きが異なるを正しくセットできませんのでご注意ください。

1. シェービングユニットリリースボタン(図①)を押し、シェービングユニットを開けます。シェービングユニットを図②の方向に動かすと本体からはずすことができます。

2. 保持板は中央のつまみを図③矢印の方向(反時計回り)に回し、図④の方向に持ち上げるとはずれます。回転刃を1組ずつユニットフレームより取り外します(図⑤)。

3. 新しい内刃と外刃を正しい組み合わせにセットし、外刃の突起部分をユニットフレームの切り込み部分に合わせて戻します。

※充電電池を取り外した後は、通電しないでください。
※ショートしないように充電電池の端子をテープで覆ってください。
※充電電池を取り出した後の製品の廃棄については、お住まいの地域の条例などに従って廃棄してください。

1. シェービングヘッドが汚れているか確認してください。
●シェービングヘッド部が損傷または摩耗していないか確認してください。
損傷または摩耗しているときは、シェービングヘッドを交換してください。(替刃品番: SH30)

2. シェービングヘッドに長いヒゲがからまっているか確認してください。

3. シェーバーの電源をOFFにし、ポップアップトリマーを充分に乾燥させてください。

⑪ 保護キャップの取り付けかた

保護キャップを取り付ける前にシェーバーをきちんと乾燥させてください。

●保護キャップを図のように、シェービングユニットに取り付け、保護します。

⑫ 保管のしかた

シェーバーを保管する前にきちんと乾燥させてください。

※室温5℃～35℃の環境で保管してください。
※直射日光の当たる場所には保管しないでください。
※夏場、車の中に放置しないでください。

⑬ シェーバーを廃棄するとき

※お客様による充電電池の修理交換はできません。

ニッケル水素電池のリサイクルについて

このシェーバーはニッケル水素電池を使用しています。ニッケル水素電池はリサイクル可能な貴重な資源です。ご使用済みの製品の廃棄の際は、ニッケル水素電池を取り出してください。取り出したニッケル水素電池は各自自治体の廃棄方法に従い、廃棄するかリサイクル協力店にお持ちください。

注意 ●製品を廃棄するとき以外は、絶対に本体を分解しないでください。
●本体内部の金具は鋭いので、ご注意ください。
●安全上の理由から一度分解した製品は、絶対に再使用しないでください。
●完全に放電してから、充電電池を取り外してください。
●電池が漏液した場合は、液が目や皮膚に触れない様に注意してください。万一目に入った時は、必ずすぐに水道水で十分洗浄し、医師の指導を受けてください。皮膚や衣類に付いた場合は水道水で十分洗い流してください。

充電電池の取り外し方

電源をONにして、完全に動作しなくなるまで充電電池を放電させてから、行ってください。

1. シェービングユニットをはずし、本体下部のネジをドライバーではずし、背面カバーをはずします。

2. ドライバーを使いシェービングユニット受部のねじ2本を外し、上面カバーを取り外します。

3. 正面カバーをはずし、モーターユニットのカバーに8つあるネジをはずし、カバーを開けます。

4. モーターユニットから電子基板を取り出します。

5. 電子基板と充電電池の接続部分をニッパなどで切り、充電電池を取り外します。

※充電電池を取り外した後は、通電しないでください。
※ショートしないように充電電池の端子をテープで覆ってください。
※充電電池を取り出した後の製品の廃棄については、お住まいの地域の条例などに従って廃棄してください。

⑭ 故障かな?と思ったら

故障かな?と思ったら、お調べください。

だんだん切れ味が悪くなった

●シェービングヘッドが汚れているか確認してください。

●シェービングヘッド部が損傷または摩耗していないか確認してください。
損傷または摩耗しているときは、シェービングヘッドを交換してください。(替刃品番: SH30)

充電しても使用時間が極端に短い

●シェーバーが完全に止まるまで動作させてから、もう一度充電してください。
それでも改善されないときは、充電電池の寿命です。

シェーバーの電源ボタンを押しても作動しない

●充電がされている場合は約1時間、充電をしてみてください。

●刃が動かなくなるほど汚れている場合はシェービングヘッドをお手入れしてください。

●刃が破損している場合は交換をしてみてください。

シェーバー本体のモーターは回転しているが、内刃が回転しない

●外刃にキズ、ヘコみがある場合はシェービングヘッドを交換してください。
(替刃品番: SH30)

充電できない

●シェーバー本体の電源コネクタ受部に充電ケーブルがきちんと差し込まれているか確認してください。

●充電ケーブルが断線している場合は新しい充電ケーブルが必要です。フィリップスサポートセンターにお問い合わせください。

●使用しているUSB充電アダプタが適合品か確認してください。

以上の点様により、正常な状態に異なる場合は、フィリップスサポートセンターにお問い合わせください。

15 保証とアフターサービス

保証書と修理サービスについて（必ずお読みください。）

（保証書・表面左側に付属）

- 保証書は、必ず「お買い上げ日・販売店名」等の記入をお確かめのうえ、販売店から受け取っていただき内容をよくお読みのあと大切に保管してください。

保証期間	お買い上げ日から2年間
対象部分	本体、充電ケーブル（シェービングユニット、保護キャップを除く）

【補修用性能部品の保有期間】

- 補修用性能部品の保有期間は製造打ち切り後 6 年です。
- 性能部品とは、その製品の機能を維持するために必要な部品です。

【ご不明な点や修理に関するご相談は】

- 修理に関するご相談ならびにご不明な点は、フィリップスサポートセンターにお問い合わせください。

【修理を依頼されるときは】

- 修理をご依頼される前に、この取扱説明書をお読みいただき、再度ご確認ください。尚、異常のあるときはご使用を中止し、フィリップスサポートセンターにお問い合わせください。

【保証期間中は】

- 製品と保証書をご用意いただき、フィリップスサポートセンターにお問い合わせください。保証書の記載内容により無料修理いたします。

【保証期間が過ぎているときは】

- 修理によって商品の機能が維持できる場合は、補修用性能部品の保有期間内であれば、ご希望により有料で修理させていただきます。

【海外では本製品の保証及びアフターサービスについて】

- 本製品の保証は海外においても有効です。（同シリーズ製品の取り扱いがある国に限りです）
- 日本国以外のフィリップスサービス部門においても保証期間内及び保証期間の経過後のアフターサービスを受けることができますが、この場合多少日数を要することもあります。
- 海外にてアフターサービスを受けられる場合は、現地のフィリップスサービス部門にお問い合わせください。尚、お困りの点がございましたら下記でご連絡ください。

Philips Service Department P.O.Box 20100 9200 CA DRACHTEN

The Netherlands, www.philips.com/support

【お客様の個人情報の取り扱いについて】

- お受けしましたお客様の個人情報は、株式会社フィリップス・ジャパンのホームページ <http://www.philips.co.jp/>に掲載されている「プライバシーに関する通知」に基づき適切に管理いたします。

便 利 メ モ			
お買い上げ日	年	月	日
お買い上げ店名	TEL.	()	

ご使用の時、このような症状はありませんか？

- 本体にさわると時々電気を感ずる。
- こげくさい臭いがする。
- 電源コード部を動かすと通電したり、しなかったりする。
- その他の異常、故障がある。



安全な使用のユーエーのゆえ

このような症状の時は、故障や事故防止のため、電源をOFFにし、充電ケーブルを本体から外して、必ずフィリップスサポートセンターにお問い合わせください。

16 仕様

品番	X3001/00	X3002/00	X3003/00	X3051/00	X3052/00	X3053/00
ハンドル品番	X3001	X3002	X3003	X3051	X3052	X3053
替刃品番	SH30					
本体寸法 (高さ×幅×奥行)	160×58×56mm					
本体質量	約186g					
電源方式	充電式					
定格入力	DC 5V 1A					
充電時間	約1時間					
使用時間	約40分			約45分		
使用充電電池	ニッケル水素充電電池 (Ni-MH)					

※改良の為、仕様を予告なく変更することがあります。

株式会社 フィリップス・ジャパン

〒106-0041 東京都港区南布台 1-3-1 南布台ヒルズ森JPタワー 15 階

17 無料修理規定

〈無料修理規定〉

- 取扱説明書、本体貼付ラベル等の注意事項に従った正常な使用状態で保証期間内に故障した場合には、無料修理します。
- 保証期間内に故障して無料修理をお受けになる場合には、フィリップスサポートセンターにお問い合わせください。
- ご増設品の修理に関するご相談は、フィリップスサポートセンターにお問い合わせください。
- 保証期間内でも次の場合には有料修理になります。

①使用上の誤り及び不当な修理や改造による故障及び損傷。

②お買い上げ後の輸送、移動、落下等による故障及び損傷。

③火災、地震、水害、落雷、その他の天災地変、公害や異常電圧による故障及び損傷。

④一般家庭以外（例えば、業務用の長時間使用）に使用された場合の故障及び損傷。

⑤保証書の提示がない場合。

⑥保証書にお買い上げ年月日、お客様名、販売店名の記入のない場合、または字句を書き換えた場合。


※保証書は、本書に明示した条件のもとにおいて無料修理をお約束するものです。従って保証書を発行している者（保証責任者）、及びそれ以外の事業者に対するお客様の法律上の権利を制限するものではありません。保証期間経過後の修理についてご不明の場合は、フィリップスサポートセンターにお問い合わせください。

※保証期間経過後の修理・補修用性能部品の保有期間について詳しくは取扱説明書の保証とアフターサービスの項目をご覧ください。


※お客様にご記入いただいた個人情報（保証書の控え）は保証期間内のサービス活動及びその後の安全点検活動のために利用させていただきます。ご了承ください。また個人情報には、株式会社フィリップス・ジャパンのホームページ <http://www.philips.co.jp/>に掲載されている「プライバシーに関する通知」に基づき適切に管理いたします。

ENGLISH

X3001/00, X3002/00, X3003/00, X3051/00, X3052/00, X3053/00

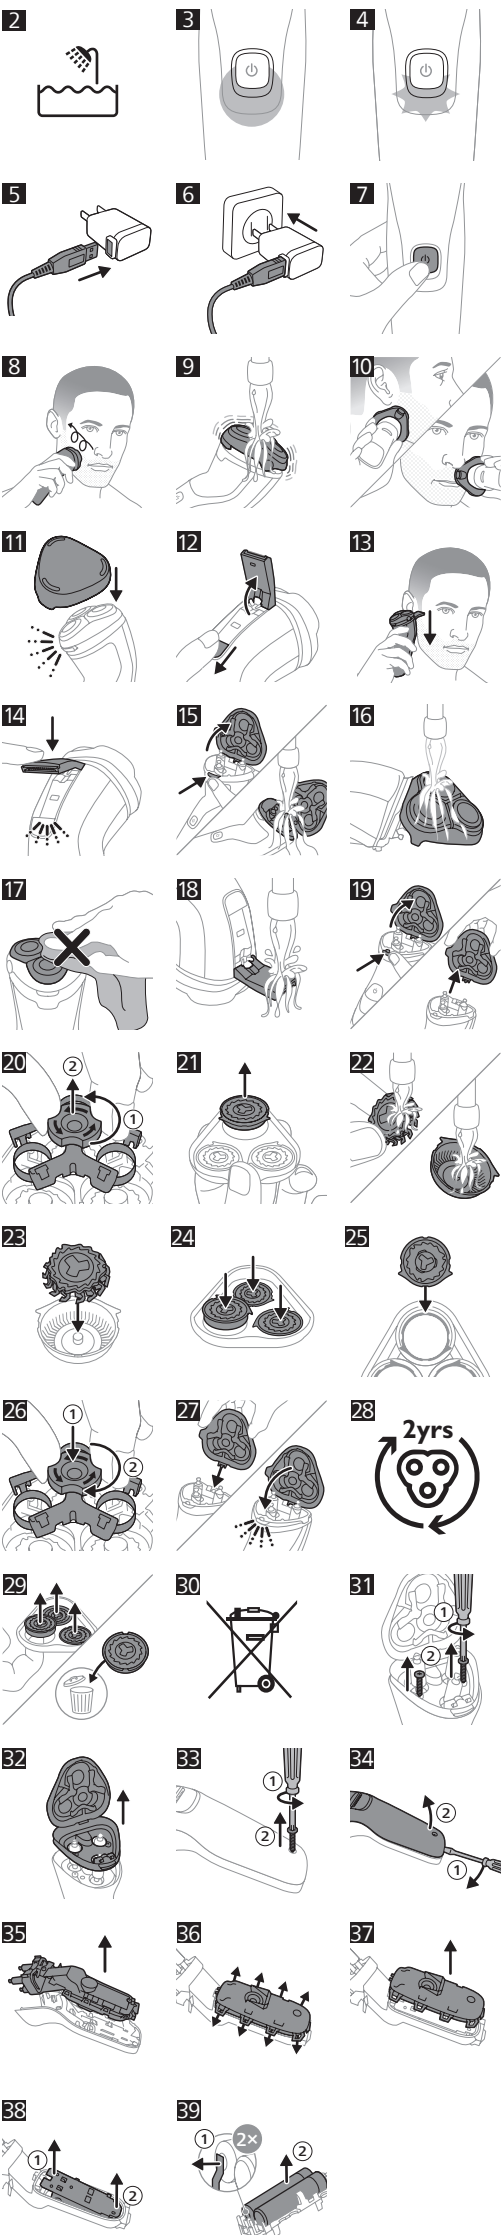

1

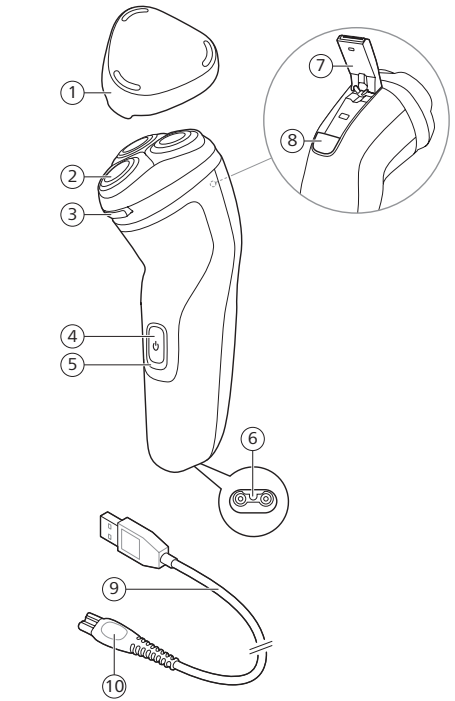

English

Introduction

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

General description (Fig. 1)

- 1 Protection cap
- 2 Shaving unit
- 3 Shaving unit release button
- 4 On/off button
- 5 Charging light
- 6 Socket for small plug
- 7 Trimmer release slide switch
- 8 Pop-up trimmer
- 9 USB cable

Note: A suitable supply unit (e.g. Philips HQ87) is available via www.philips.com/support.

Important safety information

Only use the product for its intended purpose. Read this important information carefully before you use the product and its batteries and accessories, and save it for future reference. Misuse can lead to hazards or serious injuries.

Warning

- To charge the product, only use a certified safety extra low voltage (SELV) supply unit with output rating 5 V, ≥ 1 A. For safe charging in a moist environment (e.g. in a bathroom), only use an IPX4 (splash-proof) supply unit. A suitable supply unit (e.g. Philips HQ87) is available via www.philips.com/support. If you need support finding the correct USB supply unit, contact the Consumer Care Center in your country. Using a non-certified supply unit may cause hazards or serious injuries.
- Keep the USB cable and the USB supply unit dry.
- This shaver is waterproof (Fig. 2). It is suitable for use in the bath or shower and for cleaning under the tap. For safety reasons, the shaver can therefore only be used without cord.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Do not modify the supply unit.
- Do not use the supply unit in or near wall sockets that contain an electric air freshener to prevent irreparable damage to the supply unit.
- Do not use a damaged appliance. Replace damaged parts with new Philips parts.
- Because of hygiene, only one person should use the appliance.
- Unplug the appliance before cleaning it with water.
- Only use cold or lukewarm water to clean the appliance.
- Never use compressed air, scouring pads, abrasive cleaning agents or aggressive liquids to clean the appliance.
- Water may drip from the socket at the bottom of the shaver when you rinse it. This is normal and not dangerous because all electronics are enclosed in a sealed power unit inside the shaver.
- Only use original Philips accessories or consumables.
- Charge, use and store the product at a temperature between 10 °C and 35 °C.
- Keep product and batteries away from fire and do not expose them to direct sunlight or high temperatures.
- If the product becomes abnormally hot or smelly, changes color or if charging takes longer than usual, stop using and charging the product and contact Philips.
- Do not place products and their batteries in microwave ovens or on induction cookers.
- Do not open, modify, pierce, damage or dismantle the product or battery to prevent batteries from heating up or releasing toxic or hazardous substances. Do not short-circuit, overcharge or reverse charge batteries.
- If batteries are damaged or leaking, avoid contact with the skin or eyes. If this occurs, immediately rinse

well with water and seek medical care.

Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

Charge indications

Battery fully charged

When the battery is fully charged, the charging light lights up white continuously (Fig. 3).

Note: After approx. 30 minutes, the charging light goes out to save energy.

Battery low

When the battery is almost empty (when there are only 5 or fewer shaving minutes left), the charging light flashes orange (Fig. 4).

When you switch off the product, the charging light continues to flash orange for a few seconds.

Charging

When the shaver is charging, the charging light flashes white (Fig. 4).

Quick charge

When you start charging the empty battery, the charging light flashes white quickly. After approx. 5 minutes the charging light flashes white slowly. The shaver now contains enough energy for a 5-minute shave.

Charging

Charge the shaver before you use it for the first time and when the charging light indicates that the battery is almost empty.

When you charge the shaver for the first time or after a long period of disuse, let it charge until the charging light lights up continuously.

- Charging takes approx. 1 hour.
- Quick charge: After approx. 5 minutes of charging, the battery contains enough energy for one full shave.
- A fully charged shaver has a shaving time of up to 40 minutes (X3001, X3002 and X3003 only) or 45 minutes (X3051, X3052 and X3053 only).

Note: You cannot use the appliance while it is charging.

Charging with a USB supply unit

Warning: Keep the USB cable and the USB supply unit dry.

- 1 Make sure that the appliance is switched off.
- 2 Insert the small plug of the USB cable into the socket in the bottom of the appliance.
- 3 Insert the USB plug into the USB supply unit (not provided) (Fig. 5).
- 4 Insert the USB supply unit into the wall socket (Fig. 6).
- 5 The charging light will indicate the charging status (see 'Charge indications').
- 6 After charging, remove the USB supply unit from the wall socket, pull the USB plug out of the supply unit and then pull the small plug out of the appliance.

Using the appliance

Warning: Always check the appliance and all accessories before use. Do not use the appliance or any accessory if it is damaged, as this may cause injury. Always replace a damaged part with one of the original type.

Note: This appliance is waterproof (Fig. 2). It is suitable for use in the bath or shower and for cleaning under the tap. For safety reasons, the appliance can therefore only be used without cord.

Switching the appliance on and off

- 1 To switch on the appliance, press the on/off button once (Fig. 7).
- 2 To switch off the appliance, press the on/off button once (Fig. 7).

Shaving

For the best results on skin comfort, pre-trim your beard if you have not shaved for 3 days or longer. You can use this appliance either wet or dry, or even under the shower. For a wet shave, apply some water and shaving foam or gel to your skin and rinse the shaving heads under the tap with warm water before following the steps below.

- 1 Switch on the appliance.
- 2 Move the shaver in circular movements over your skin to catch hair growing in all directions (Fig. 8). Make sure each shaving head is fully in contact with the skin. Exert gentle pressure for a close, comfortable shave.

Note: Do not press too hard, as this can cause skin irritation.

Note: If you are shaving with gel or foam, rinse the shaving unit regularly during your shave to ensure that it continues to glide smoothly over your skin (Fig. 9).

- 3 Use the narrow sides of the shaving unit to shave in hard-to-reach areas such as along your jawline and under your nose (Fig. 10).
- 4 Switch off and clean the appliance after each use (see 'Cleaning and maintenance').
- 5 Put the protection cap on the shaver after use to prevent damage and dirt accumulation in the shaving heads (Fig. 11).

Note: Make sure you rinse all foam or shaving gel off the appliance.

Skin adaptation period

Your first shaves may not bring you the result you expect and your skin may even become slightly irritated. This is normal. Your skin and beard need time to adapt to any new shaving system. To allow your skin to adapt to this new appliance, we advise you to shave regularly (at least 3 times a week) and exclusively with this appliance for a period of 3 weeks.

Trimming with pop-up trimmer

You can use the trimmer to groom your sideburns and moustache.

- 1 Push the trimmer release slide downwards to open the trimmer (Fig. 12).

- 2 Switch on the appliance.
- 3 Hold the trimmer perpendicular to the skin and move the appliance downwards while you exert gentle pressure (Fig. 13).
- 4 Switch off the appliance and clean the trimmer after each use to prevent clogging and damage (see 'Cleaning and maintenance').
- 5 Close the trimmer ('click') (Fig. 14).

Cleaning and maintenance

Cleaning the shaver

Clean the shaver after every shave for optimal shaving performance.

Caution: Always check if the water is too hot, to prevent burning your hands.

While rinsing shaving heads, water may drip out of the base of shaver. This is a normal occurrence. Internal electric parts are in a waterproof compartment so the shaver will be protected against water damage.

- 1 Switch on the shaver.
- 2 Rinse the shaving unit with cold or lukewarm water (Fig. 9).
- 3 Switch off the shaver. Press the shaving unit release button to open the shaving unit (Fig. 15).
- 4 Rinse the shaving unit and hair chamber with lukewarm water (Fig. 15).
- 5 Rinse the outside of the shaving unit with lukewarm water (Fig. 16).
- 6 Carefully shake off excess water and let the shaver air dry.

Caution: Never dry the shaving unit with a towel or tissue, as this may damage the shaving heads (Fig. 17).

- 7 Close the shaving unit.

Cleaning the pop-up trimmer

Caution: Never dry the trimmer teeth with a towel or tissue, as this may damage the trimmer teeth.

Clean the trimmer after each use to prevent clogging and damage.

- 1 Switch off the shaver.
- 2 Push the trimmer release slide downwards to open the trimmer (Fig. 12).
- 3 Switch on the shaver and rinse the pop-up trimmer under warm water (Fig. 18).
- 4 Switch the shaver off after cleaning.
- 5 Carefully shake off excess water and let the pop-up trimmer air dry.
- 6 Close the trimmer ('click') (Fig. 14).

Tip: For optimal performance, lubricate the teeth of the pop-up trimmer with a drop of mineral oil every six months (oil not included).

Thorough cleaning

Clean the shaving heads thoroughly once a month for optimal performance.

- 1 Switch off the shaver.
- 2 Press the shaving unit release button to open the shaving unit. Pull the shaving unit off the shaver (Fig. 19).
- 3 Turn the lock counterclockwise (1) and remove the retaining frame (2). Place it aside in a safe place (Fig. 20).
- 4 Remove and clean one shaving head at a time. Each shaving head consists of a cutter and a guard (Fig. 21).

Note: Do not clean more than one cutter and guard at a time, since they are all matching sets. If you accidentally mix up the cutters and guards, it may take several weeks before optimal shaving performance is restored.

- 5 Remove the cutter from the shaving guard and clean both parts under the tap (Fig. 22).
- 6 Put the cutter back into the guard (Fig. 23).
- 7 Put the shaving heads back into the shaving unit (Fig. 24).

Note: Make sure that the shaving heads with the projections fit exactly onto the hooks of the shaving head holder when placing them (Fig. 25). The shaving heads supplied with the shaver either have notches or projections. Both shaving systems are the same.

- 8 Put the retaining frame back into the shaving unit (1) and turn the lock clockwise (2) (Fig. 26).
- 9 Insert the hinge of the shaving unit into the slot in the top of the shaver. Then close the shaving unit (Fig. 27).

Note: If the shaving unit does not close smoothly, check if you have inserted the shaving heads properly and if the retaining frame is locked.

Replacement

Replacing the shaving heads

For maximum shaving performance, we advise you to replace the shaving heads every two years (Fig. 28). Replace damaged shaving heads immediately. Always replace the shaving heads with original Philips shaving heads (see 'Ordering accessories').

- 1 Switch off the shaver.
- 2 Press the shaving unit release button to open the shaving unit. Pull the shaving unit off the shaver (Fig. 19).
- 3 Turn the lock counterclockwise (1) and remove the retaining frame (2). Place it aside in a safe place (Fig. 20).
- 4 Remove the shaving heads from the shaving unit. Discard the used shaving heads immediately to avoid mixing them with the new shaving heads (Fig. 29).
- 5 Place new shaving heads in the shaving unit (Fig. 24).

Note: Make sure that the shaving heads with the projections fit exactly onto the hooks of the shaving head holder when placing them (Fig. 25). The shaving heads supplied with the shaver either have notches or projections. Both shaving systems are the same.

- 6 Put the retaining frame back into the shaving unit (1) and turn the lock clockwise (2) (Fig. 26).
- 7 Insert the hinge of the shaving unit into the slot in the top of the shaver. Then close the shaving unit (Fig. 27).

Note: If the shaving unit does not close smoothly,

check if you have inserted the shaving heads properly and if the retaining frame is locked.

Storage

Put the protection cap on the shaver to prevent damage (Fig. 11).

Note: Always let the shaver dry completely before storing.

Ordering accessories

To buy accessories or spare parts, visit

www.philips.com/parts-and-accessories or go to your Philips dealer. You can also contact the Philips Consumer Care Center in your country.

Recycling

- This symbol means that electrical products and batteries shall not be disposed of with normal household waste (Fig. 30).
- Follow your country's rules for the separate collection of electrical products and batteries.

Removal of built-in rechargeable battery

The built-in rechargeable battery must only be removed by a qualified professional when the appliance is discarded. Before removing the battery, make sure that the appliance is disconnected from the wall socket and that the battery is completely empty.

Take any necessary safety precautions when you handle tools to open the appliance and when you dispose of the rechargeable battery.

When you handle batteries, make sure that your hands, the product and the batteries are dry.

To avoid accidental short-circuiting of batteries after removal, do not let battery terminals come into contact with metal objects (e.g. coins, hairpins, rings). Do not wrap batteries in aluminum foil. Tape battery terminals or put batteries in a plastic bag before you discard them.

Be careful, the battery strips are sharp.

- 1 Press the shaving unit release button to open the shaving unit. Pull the shaving unit off the shaver (Fig. 19).
- 2 Remove the two screws inside the hair chamber (Fig. 31).
- 3 Pull the hair chamber upwards to remove it (Fig. 32).
- 4 Remove the screw from the back cover of the shaver (Fig. 33).
- 5 Insert a flathead screwdriver into the slot in the bottom of the shaver. Twist it to separate the back cover from the front cover (Fig. 34). You may need to insert the screwdriver all along the edges of the back cover.
- 6 Remove the front cover and take out the inner housing (Fig. 35).
- 7 Bend the eight snap hooks of the transparent cover with a flathead screwdriver (Fig. 36).
- 8 Pull the transparent cover upwards with some force to remove it (Fig. 37).
- 9 To remove the battery module from the inner housing, first firmly pull up the top part with your fingers and then firmly pull up the bottom part (Fig. 38).
- 10 Break the battery tags with a pair of cutting pliers. Remove the two rechargeable batteries (Fig. 39).

Warranty and support

If you need information or support, please visit

www.philips.com/support

Warranty restrictions

The shaving heads (cutters and guards) are not covered by the terms of the international warranty because they are subject to wear.